




USER GUIDE 10 - 24 TON PALLET FORKS

The Pallet Forks are designed to fit excavators with a capacity ranging from 10-24 tonnes. The corresponding pin size has to be selected depending on this size capacity.

Pallet Forks should always be used in conjunction with an appropriately sized quick hitch

FITTING INSTRUCTIONS

1. Ensure pallet fork pin centres correspond to the pin centre of the quick hitch using the variable pin centre system.
2. Using the quick hitch attach the pallet forks to the excavator.
3. Ensure the safety pin is installed where appropriate.
4. Before attempting to lift objects ensure that the forks are securely fitted to the rails and the cam locks are locked into an appropriate position.

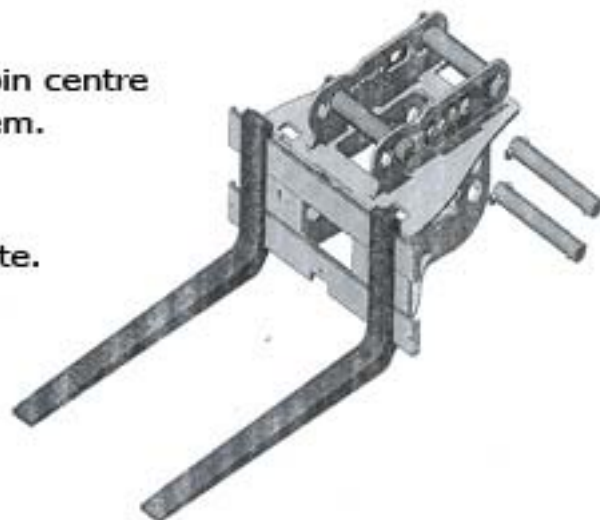

!! CAUTION !!

- Pallet Forks are certified SWL 2 Tonnes. Exceeding this limit will void the warranty
- Do not use the forks for wrenching or pushing other equipment.
- Any loads should be securely restrained during operation using the strapping points provided.
- Forks should always be set to maximum allowable width when lifting pallets. Never use extensions on forks or longer forks than those supplied.
- Never use Pallet Forks to lift people.
- In the unlikely event of a fork bending, do not attempt any repair work. This will void the certification.
- Never use pallet forks without engaging the Safety pin or other safety locking device.
- Pallet forks should only be used by a competent operator.

Email: sales@stricklanduk.com



www.stricklanduk.com

STRICKLAND DIRECT LTD
THE HEATH PARK
CROPTHORNE
PERSHORE
WORCESTERSHIRE
WR10 3NE

Tel: +44 (0) 1386 860349 Fax: +44 (0) 1386 860057